 






Jamstik 7  
SmartGuitar

# Let's get started

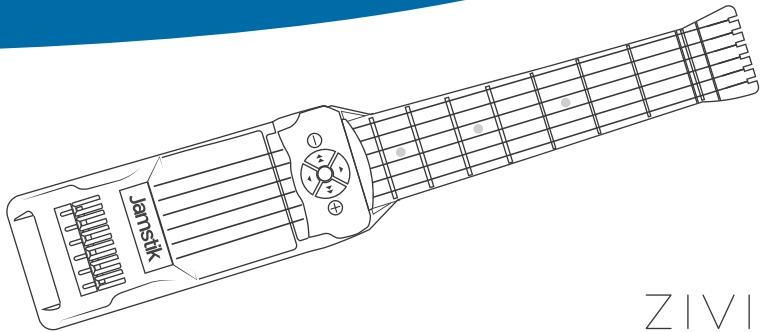

    ZIVIX

# Features & Controls

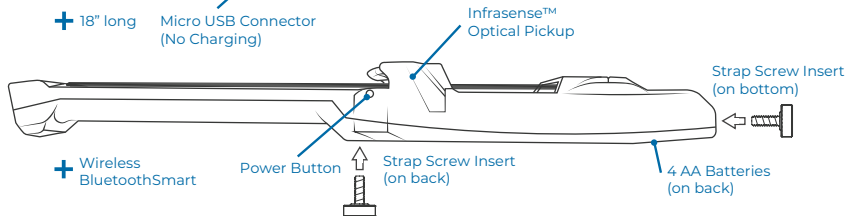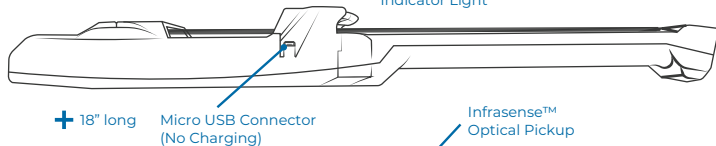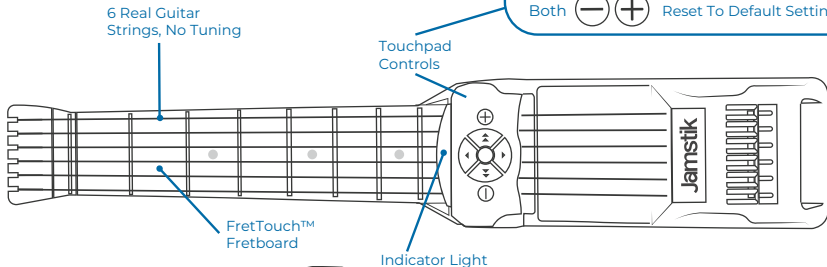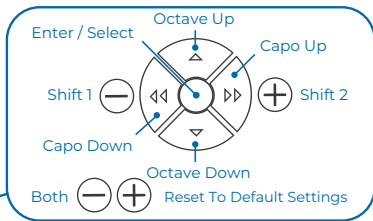

+ Wireless BluetoothSmart

# Hello!

We hope you enjoy getting started with your Jamstik. If you have any questions at all, please ask us directly via Live Chat on Jamstik.com or email us at support@zivix.net.

We really appreciate you being part of our story, and we hope the Jamstik takes you further on your journey as a musician.

Happy Playing! *- The Jamstik Team*

---


## 1 Go to [jamstik.com/start](http://jamstik.com/start)

- Register on site.
- View detailed tutorials & information.
- Download compatible apps for your device.



## 2 Power on

- Ensure 4 AA batteries are installed.
- Hold the power button on the side of your Jamstik for 1 second. (Same to turn off.)
- Do not touch the fretboard during power up.
- The LED indicator will pulse red at startup, blink green when ready to pair, and fade green in and out when connected.

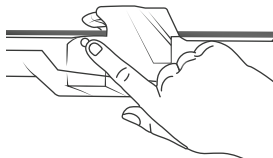

### 3 Connect & Pair


#### iPad/iPhone\*

- Download the Jamstik Companion App from the app store.
- Activate Bluetooth on your iPad/iPhone.
- Launch the Jamstik app and tap “Select a Jamstik”.
- Select your Jamstik ID from the list.  
Your unique Jamstik ID is an 8 character code on a sticker on the back of your Jamstik.



#### Mac/PC or Chrome Web Browser

- Connect to device via USB or Bluetooth via Audio MIDI setup (Mac Only).
- Go to [play.jamstik.com](http://play.jamstik.com) and follow on-screen prompts.

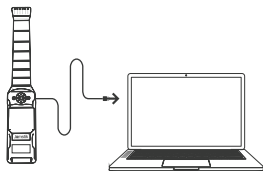

### 4 Updating Your Jamstik

- You can update your Jamstik by connecting to the iOS App and clicking, “update firmware”. If an update is available, you’ll be notified when connected to the online Play Portal.
- Always ensure your Jamstik is updated for the best playing experience!

### 5 Troubleshooting

- If your LED is blinking Red & Green, this indicates low battery, and your AA batteries should be replaced.
- If your Jamstik is out of tune or gets a stuck note, perform a soft-reset by pressing both (+) & (-) buttons simultaneously.
- For anything not listed here, please visit: [jamstik.com/support](http://jamstik.com/support)



# FOR BEST PLAYING EXPERIENCE


- You won't need to adjust string tension, the Jamstik 7 comes ready to play.
- Wireless headphones & speakers cause delay. Always use wired audio output from your device!

## Audio Connection Guide




## Fretting Technique

For the best playing experience, make complete contact with the pad of your fingertip to the fretboard.

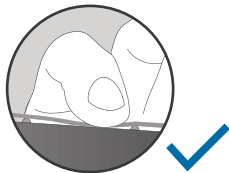

If you press down too lightly, your fingers may not be recognized by the fretboard sensors.

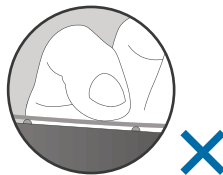

For more tips visit [Jamstik.com/Start](https://www.jamstik.com/start)

You'll find tips, app recommendations, video tutorials and more!

# Our customers come first.

If you have any questions, we are here to help.  
Contact our Customer Experience Team at:  
[support@zivix.net](mailto:support@zivix.net)

Submit a ticket at: [jamstik.com/support](https://jamstik.com/support)  
(612) 225-0096

## Connect With Us!



@thejamstik



@Jamstik



@Jamstik

## Important Safety Instructions:

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not operate near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the Manufacturer.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

DON'T—Mix old and new batteries, batteries of different brands, or batteries of different types in the same device as this may cause the batteries to leak.

DON'T—Attempt to recharge non-rechargeable batteries. This can cause your batteries to overcharge or leak.

DON'T Remove the battery label, attempt to take the battery apart, or dispose of in a fire as this may lead to rupture and/or chemical burns.


### **Recycling:**

Alkaline batteries can be safely disposed of normal household waste, everywhere but California. We however strongly recommend for these to be disposed at a recycling station.

# Have You Tried These Accessories?



**Travel Case**

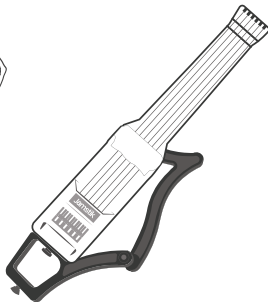

**Add-On Body**



**Wood Stand**

Find these accessories and more at:  
[jamstik.com/accessories](http://jamstik.com/accessories)  
Save 10% with discount code **"SAVE10"**