

# ASSEMBLY INSTRUCTIONS

(For Models KS8190, KS8191, KS8390, KS8391, KS8200, KS8290, KS8291)

**IMPORTANT:** Tighten the fasteners as directed in each step.

Before assembly, set disk clutch in middle position for ease of setup and balance of stand. (as shown).



❶ Take bottom right foot with Yellow sticker and fit it on the X-leg. Line up the Yellow sticker on foot with Yellow sticker on X-leg. Secure in place with fastener. Leave stand in the upright position to complete assembly.

❷ Take bottom left foot with Green sticker and fit it on the X-leg. Line up the Green sticker on foot with Green sticker on X-leg. Secure in place with fastener.

**DOUBLE-X MODELS ONLY:** Repeat steps 1 and 2 for the rear X-leg. Continue to Step 3.

❸ Take top right arm with Orange sticker and fit it on the X-leg. Line up the Orange sticker on arm with Orange sticker on X-leg. Secure in place with fastener.

❹ Take top left arm with Blue sticker and fit it on the X-leg. Line up the Blue sticker on arm with Blue sticker on X-leg. Secure in place with fastener.

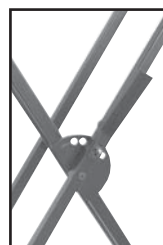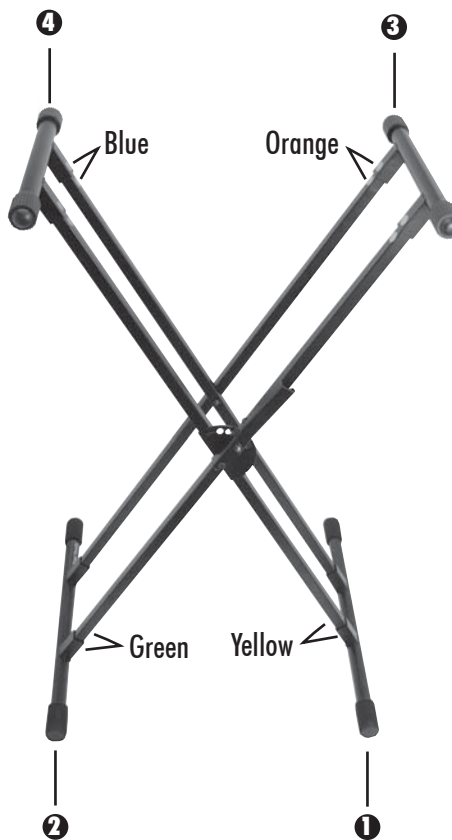

**IMPORTANT NOTE:**  
The FRONT SET of X-legs on all Double X models has the disk clutch.

**On-Stage  
Stands**

[www.onstagestands.com](http://www.onstagestands.com)  
[www.musicpeopleinc.com](http://www.musicpeopleinc.com)

© 2003 TMP, Inc.