



## CMBB

**Any suggestion ?**

**They are well appreciated and eventually rewarded!  
Send your ideas or suggestions to**

**[suggestions@apart-audio.com](mailto:suggestions@apart-audio.com)**



The CMBB backbox is developed by

**Audioprof nv**  
Lanteernhofstraat 90  
BE-2100 Deurne  
Belgium

[info@apart-audio.com](mailto:info@apart-audio.com)  
[WWW.APART-AUDIO.COM](http://WWW.APART-AUDIO.COM)

## OWNER'S MANUAL




The CMBB is a very useful tool to install all APart CM loudspeakers, with 6,5" woofer, on or in a wall or ceiling. The backbox has an elegant design and due to its conical shape it can be inserted in a wall or ceiling.

The CMBB backbox can be used with the plastic 6.5" APart loudspeakers:


**IN-WALL MOUNTING**




**ON-WALL MOUNTING**

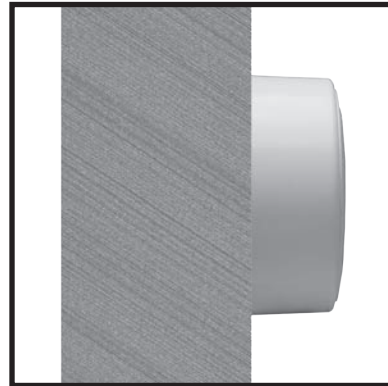

**IN-CEILING MOUNTING**

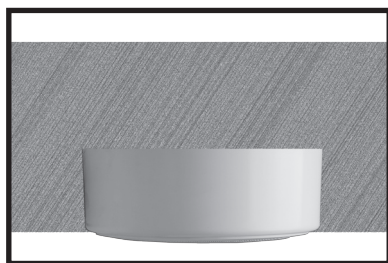


**ON-CEILING MOUNTING**

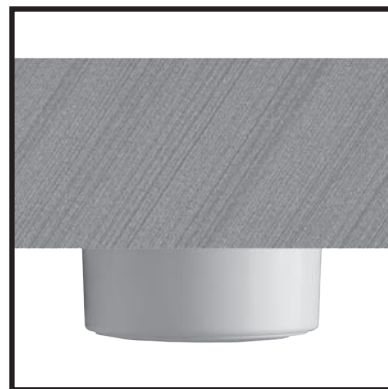


Built-in depth : 80mm  
Outside Ø : 230mm



**Wall or ceiling mounting the CMBB**

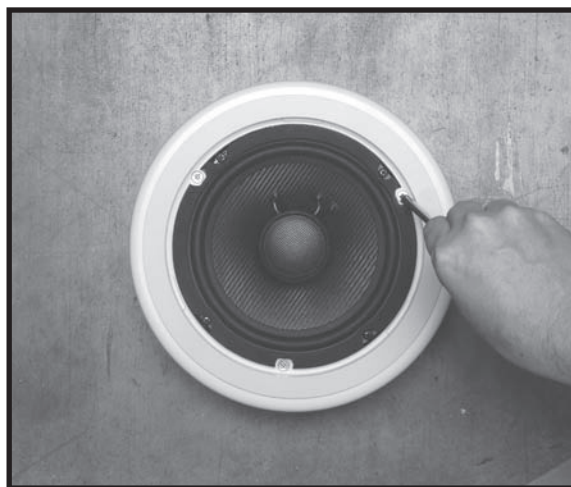


- Tighten the three screws at the front of your loudspeaker.

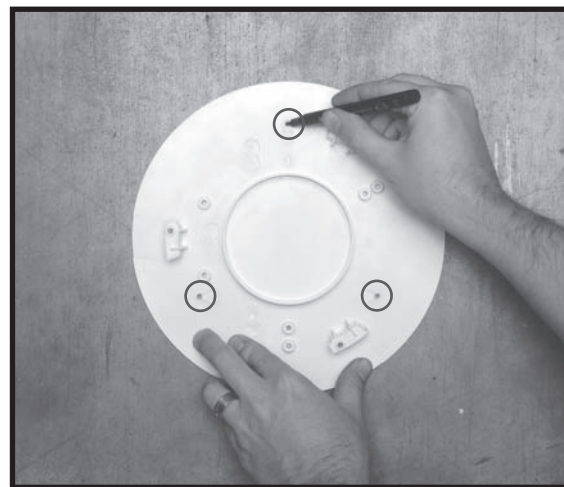


- Open the three mounting holes on the base and mark the holes to drill, pointing the arrow to the top.




- Put the loudspeaker grill in its place.
- Your job is done and the result speaks for itself, congratulations!

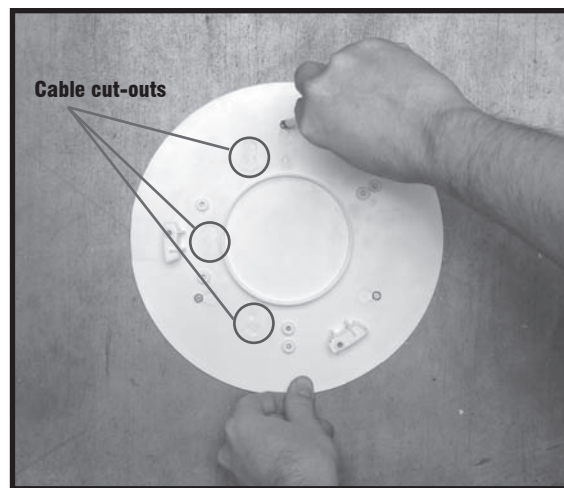


- Use the provided speaker wire cut-outs to feed your cable through the base. If your cables have been fixed on the wall, you can also use the cable cut-outs at the side of the backbox.

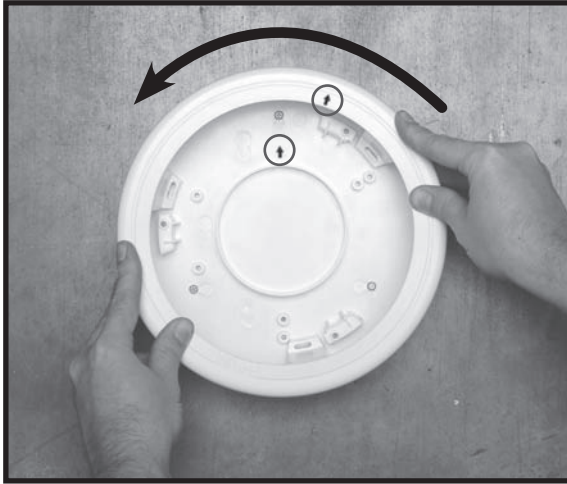

- Now you can mount the backbox by rotating it counter-clockwise. The arrows of the base and backbox should now be aligned.

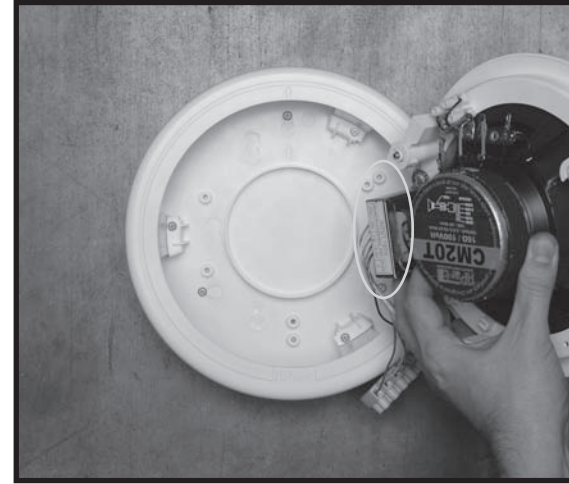

- Connect your loudspeaker and remove the grill.
- To insert the loudspeaker in the backbox, you should see that the transformer is at your right-hand side. If not, you cannot fix your loudspeaker in a proper way to your backbox

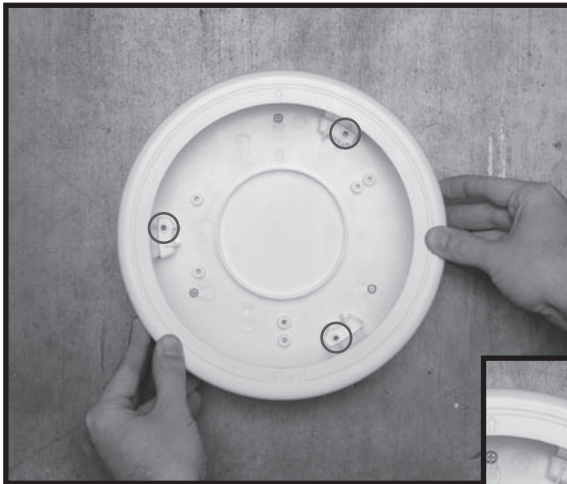

- To secure the backbox to the base, you can use the screws, shipped along; easy and safe!

